Lever and Knob Handles



forged brass lever handles

ARGO


SB201-A LE4
SB202-A LE4
SB203-C LE5
SB204-A LE5
SB205-A LE5
SB206-A LE6
SB207-A LE6
SB208-L LE7
SB209-K LE7
SB210-A LE7
SB211-P LE8
SB212-A LE8
SB213-C LE9
SB214-A LE9
SB215-A LE9
SB216-A LE10
SB217-J LE10
SB219-A LE11
SB220-A LE11
SB221-A LE11
SB222-A LE12
SB223-H LE12
SB225-A LE13
SB226-A LE13
SBK801-A LE16
SBK802-C LE16
SBK803-A LE16
SBK804-A LE16
SBK805-P LE16
SBK806-K LE16
Roses LE17
Escutcheons LE18
5 Series Rose & Cylinder Escutcheons for Set LE21
5 Series Bracket LE22
How to order LE24
Installation Instructions LE25-27
Information LE28-29
Fix Back Plate LE30
AT Series LE30
Finishes LE31-33



SB Series LE4-13



SBK Series LE16

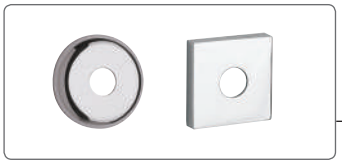

Roses LE17




Escutcheons LE18




5 Series LE21-23



How to order LE24

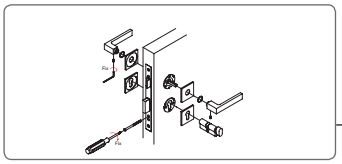


Installation Instructions LE25-27

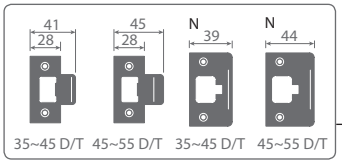

Information LE28-29



Fixing Back Plate, AT Series LE30

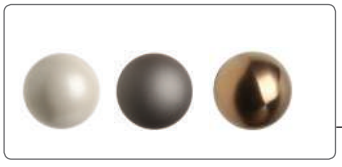

Finishes LE31-33

Numerous patents, copyrights, and trademarks are held by us to protect the integrity and reputation of our distinctive line of hardware appointments.
Manufacturer reserves all rights of any modification, materials and specifications without notice.

SB SERIES

Brass Lever Handle

Standard Finishes:
F21, F22, F91~F102,
F91T~F108T, PVD

SB201-A




F101




F96T

SB202-A

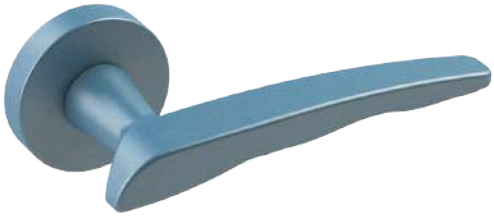

F106T

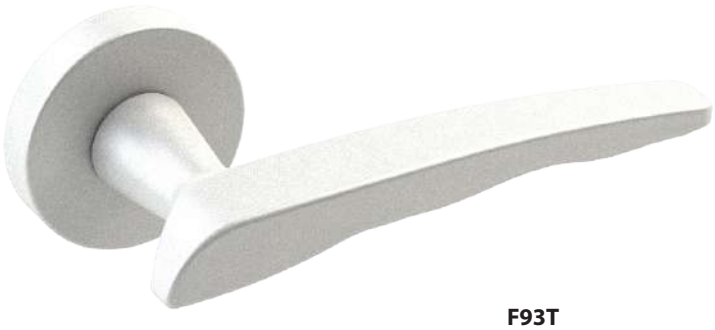

F93T

SB203-C



F91



F102T

SB204-A



F97T



F21

SB205-A



F305



F17

SB SERIES

Brass Lever Handle

Standard Finishes:
F21, F22, F91~F102,
F91T~F108T, PVD

SB206-A



F99R



F100T

SB207-A




F104T



F94T

SB208-L

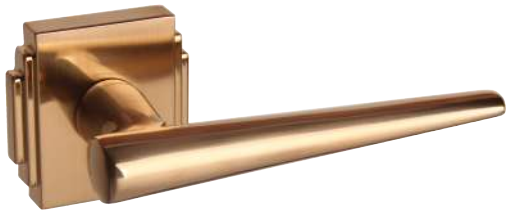

F302



F22

SB209-K



F307



F107T

SB210-A



F99




F96T

SB SERIES

Brass Lever Handle

Standard Finishes:
F21, F22, F91~F102,
F91T~F108T, PVD

SB211-P

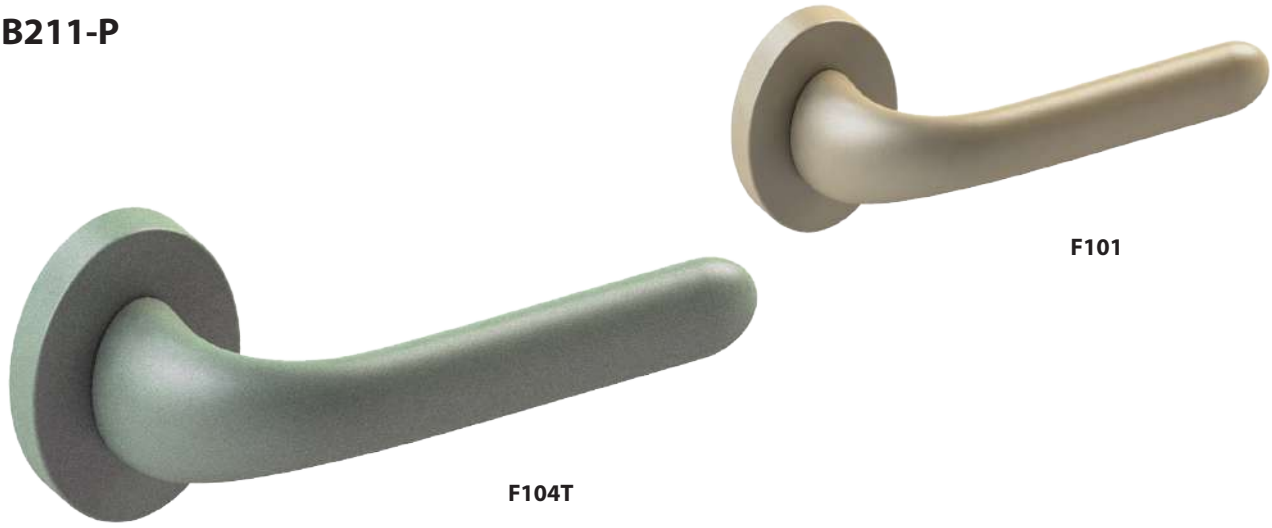

F101

F104T

SB212-A



F108T

F94T

SB213-C



F22



F106T

SB214-A



F305




F306

SB215-A



F93

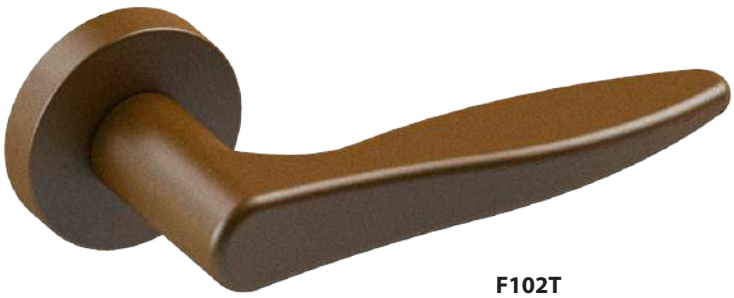

F102T

SB SERIES

Brass Lever Handle

Standard Finishes:
F21, F22, F91~F102,
F91T~F108T, PVD

SB216-A



F17



F100

SB217-J



F21



F104T

SB219-A



F305



F307

SB220-A



F108T



F101

SB221-A



F96T



F106T

SB SERIES

Brass Lever Handle

Standard Finishes:
F21, F22, F91~F102,
F91T~F108T, PVD

SB222-A



F22




F91

SB223-H



F307

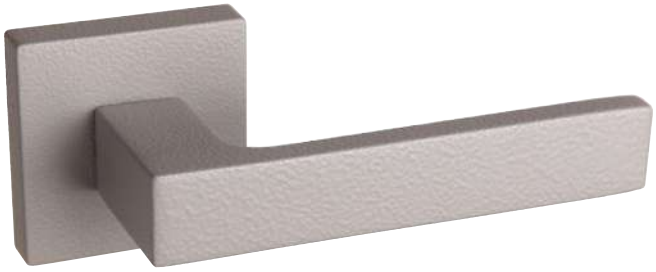


F99R

SB225-A




F100T

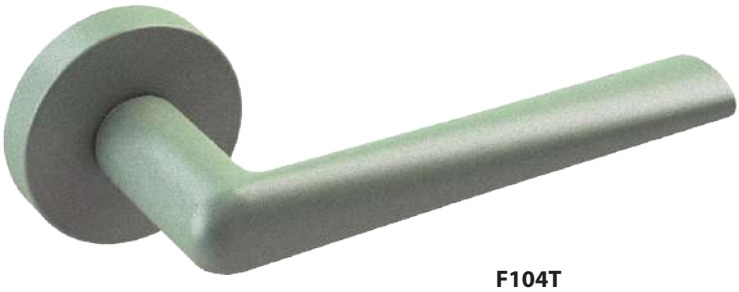

F104T

SB226-A

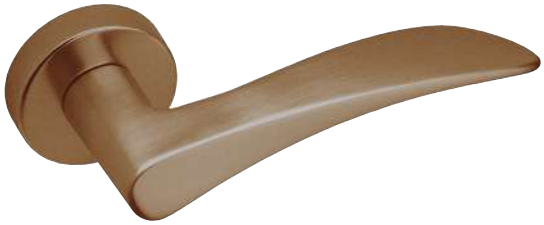

F302




F97T


SB SERIES

Brass Lever Handle


Dimensions
in millimeters

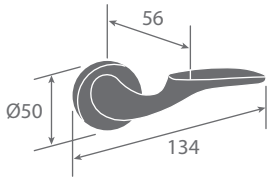


SB201-A

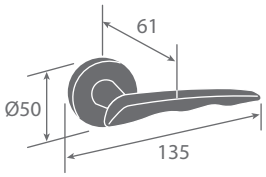


SB202-A

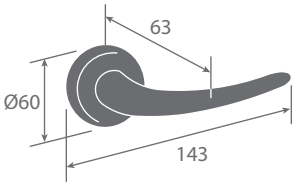


SB203-C

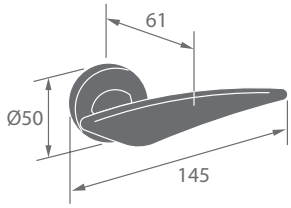


SB204-A

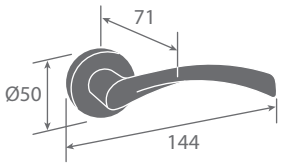


SB205-A

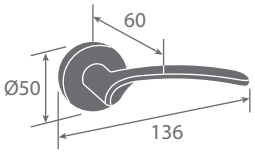


SB206-A

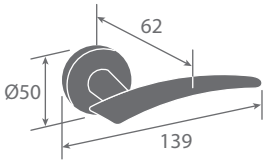


SB207-A

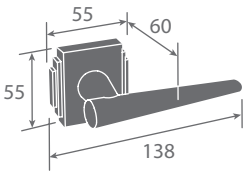


SB208-L

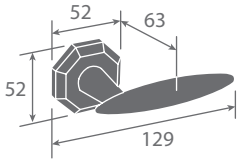


SB209-K

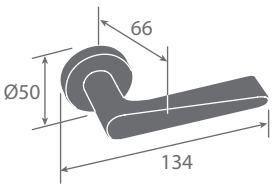

SB210-A

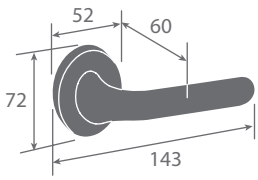

SB211-P

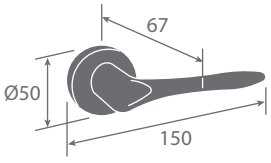


SB212-A


SB SERIES

Brass Lever Handle


Dimensions
in millimeters

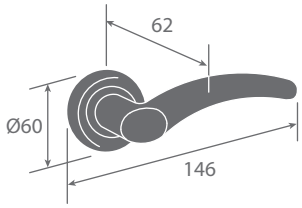


SB213-C

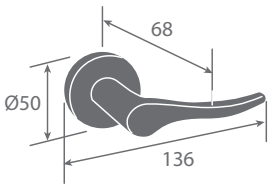


SB214-A

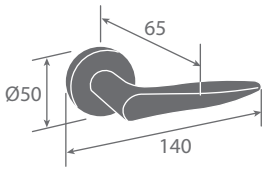


SB215-A

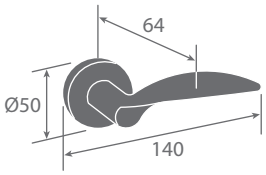


SB216-A

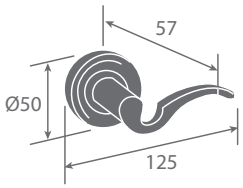


SB217-J

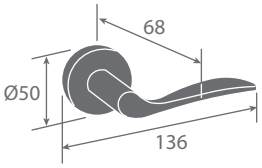


SB219-A

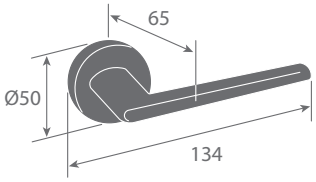


SB220-A

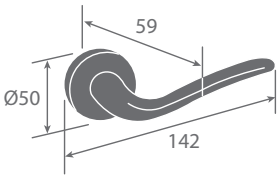


SB221-A

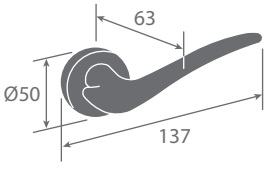


SB222-A

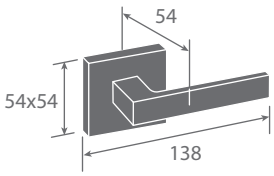

SB223-H

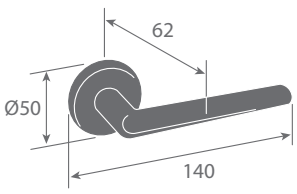

SB225-A

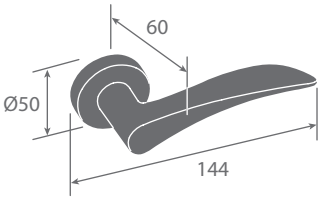

SB226-A

SBK SERIES

Knobset

Standard Finishes:
F21, F22, F91~F102,
F91T~F108T, PVD

SBK801-A



F101

SBK802-C



F106T

SBK803-A



F96T

SBK804-A



F94T

SBK805-P



F97

SBK806-K




F102


SBK SERIES

Knobset


Dimensions
in millimeters

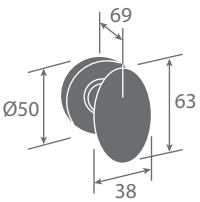


SBK801-A

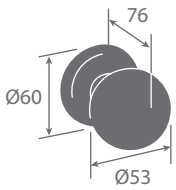


SBK802-C

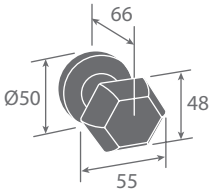


SBK803-A

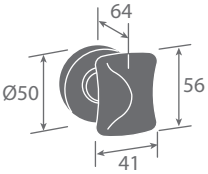

SBK804-A

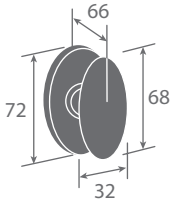

SBK805-P

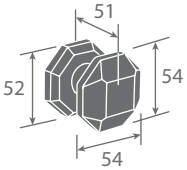

SBK806-K

ROSES

The trim design to be chosen from Rose design **A - S**

A



C



H



J



K




L



M



N

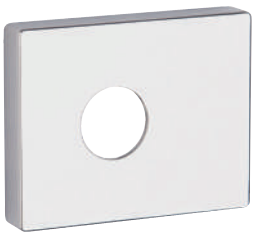

P



Q



S



ESCUTCHEONS

Cylinder Escutcheon

The trim design to be chosen from Rose design **AE - SE**

AE



CE



HE



JE



KE



LE



ME



NE



PE



QE



SE




ROSES


Dimensions
in millimeters




Cassette Component

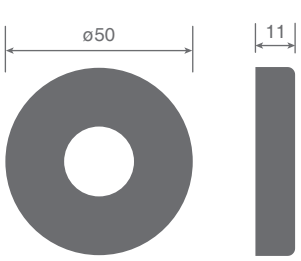


A

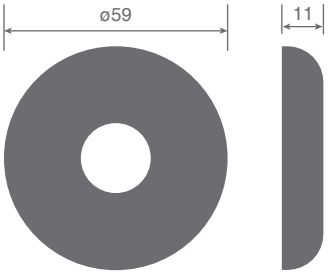


C

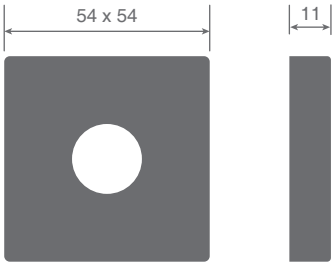


H

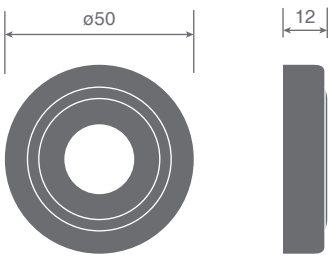

J

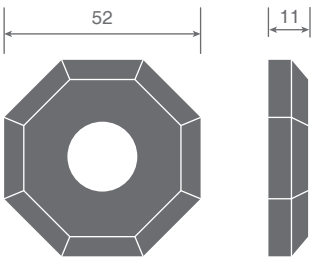


K

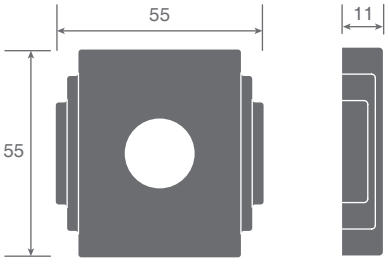


L

ROSES


Dimensions
in millimeters

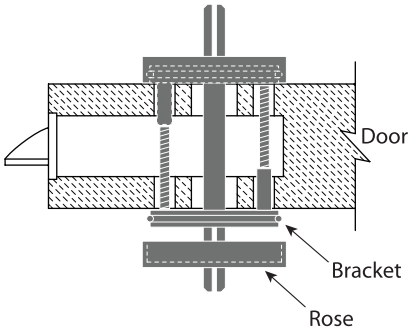


Top View

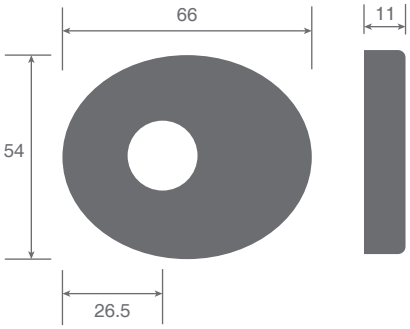


M

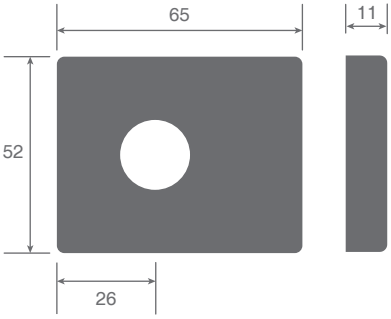


N

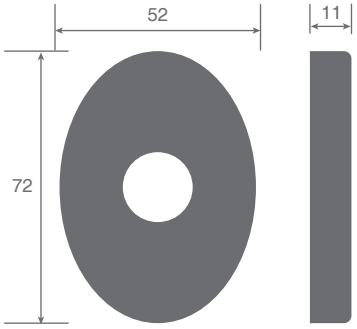

P

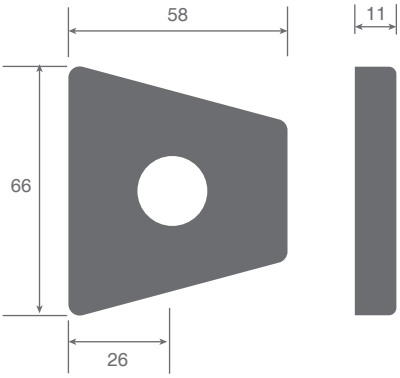

Q

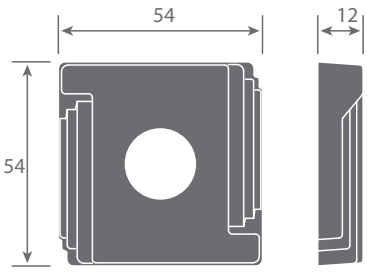

S

5 SERIES

Rose &
Cylinder Escutcheon





Outside





Inside





Outside





Inside

5 SERIES

Rose &
Cylinder Escutcheon

Rose design A & H

Bracket



Rose Bracket



Cylinder Escutcheon Bracket

5-A
Rose Cover



5-AE
Cylinder Escutcheon Cover



5-H
Rose Cover




5-HE
Cylinder Escutcheon Cover




5 SERIES

Dimensions
in millimeters

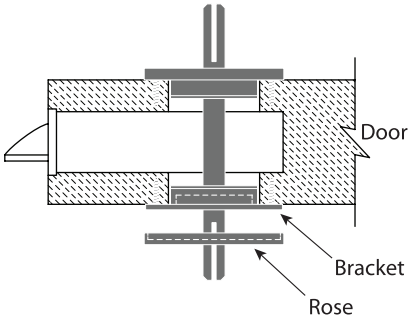


Top View

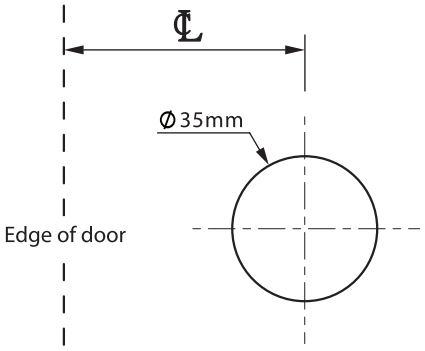


Template for 5 Series Bracket


Bracket






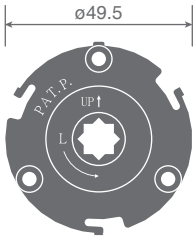


Rose

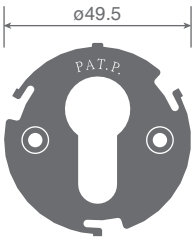


Cylinder Escutcheon

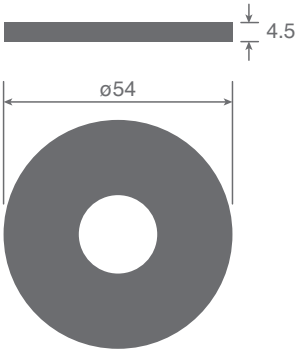


5-A

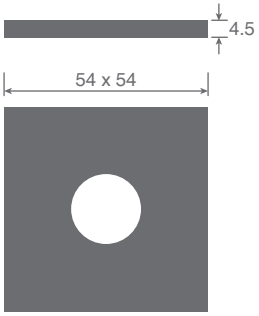

5-H

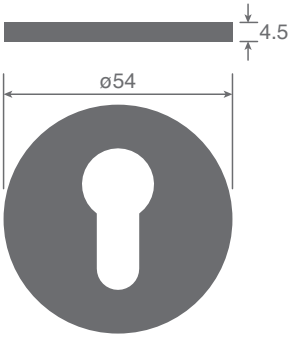


5-AE

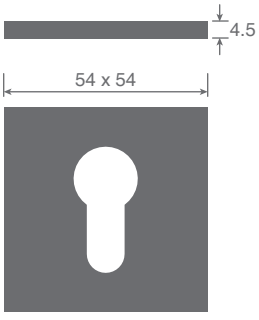

5-HE

How to Order

EXAMPLE 1 : SB223-5H-5HE-4650-60-4622S-D-F21-50DT

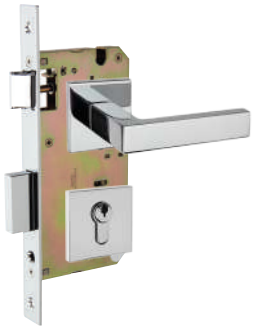

Lever Set	Lock	Cylinder	Finish	Door Thickness (D/T)
SB223-5H-5HE	**4650-60**	**4622S-D**	**F21**	**50**
			Bright Chrome	50mm

EXAMPLE 2 : SB220-M-5091R-60-F21-45DT



Lever Set	Latch	Backset	Finish	Door Thickness (D/T)
SB220-M	**5091R**	**60**	**F21**	**45**
		60mm	Bright Chrome	45mm

EXAMPLE 3 : SB210-A-CLQ-05-F22-50DT



Lever Set	Lock	Function Number	Finish	Door Thickness (D/T)
SB210-A	**CLQ**	**05**	**F22**	**50**
		Entrance	Satin Nickel	50mm

EXAMPLE 4 : SB203-C-CE-4626-70-4622S-A-F21-55DT




Lever Set	Lock	Cylinder	Finish	Door Thickness (D/T)
SB203-C-CE	**4626-70**	**4622S-A**	**F21**	**55**
			Bright Chrome	55mm


Installation Instruction

For Example 1


1

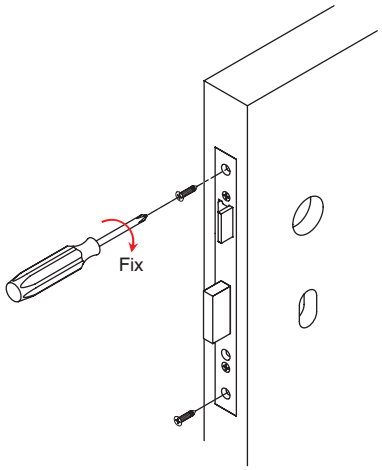


2

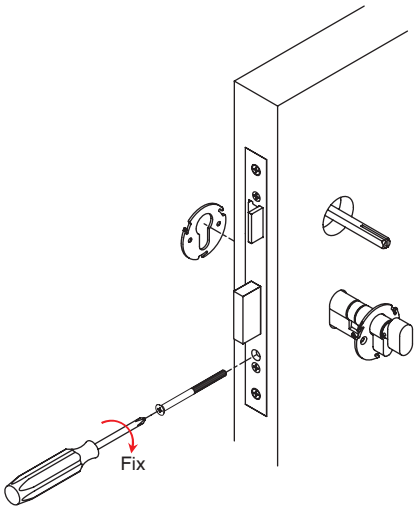


3

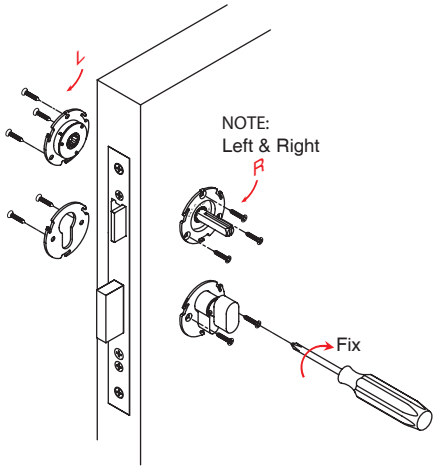

4

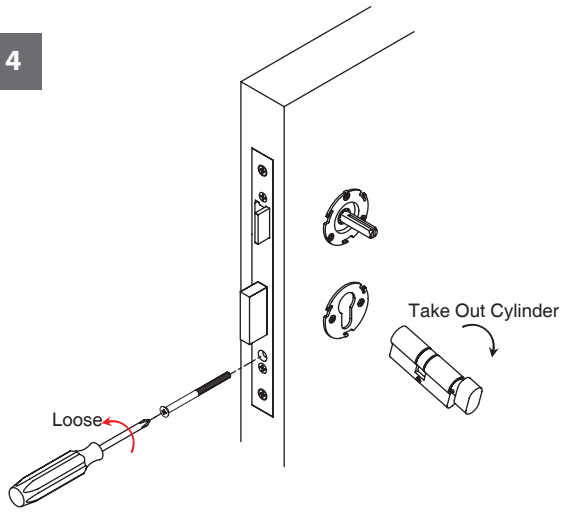


5

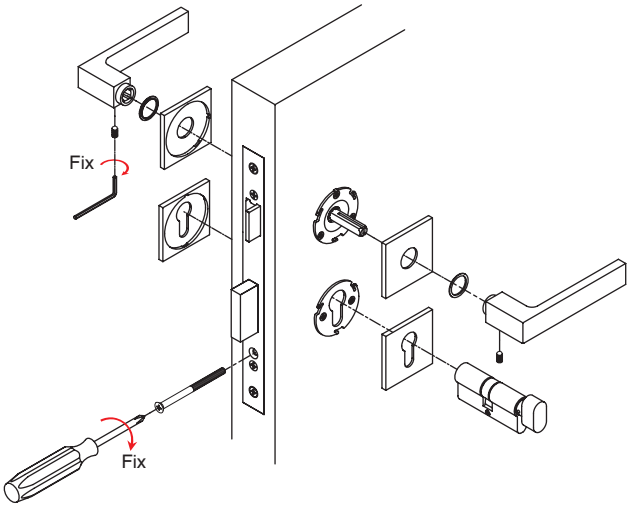

Installation Instruction


For Example 3

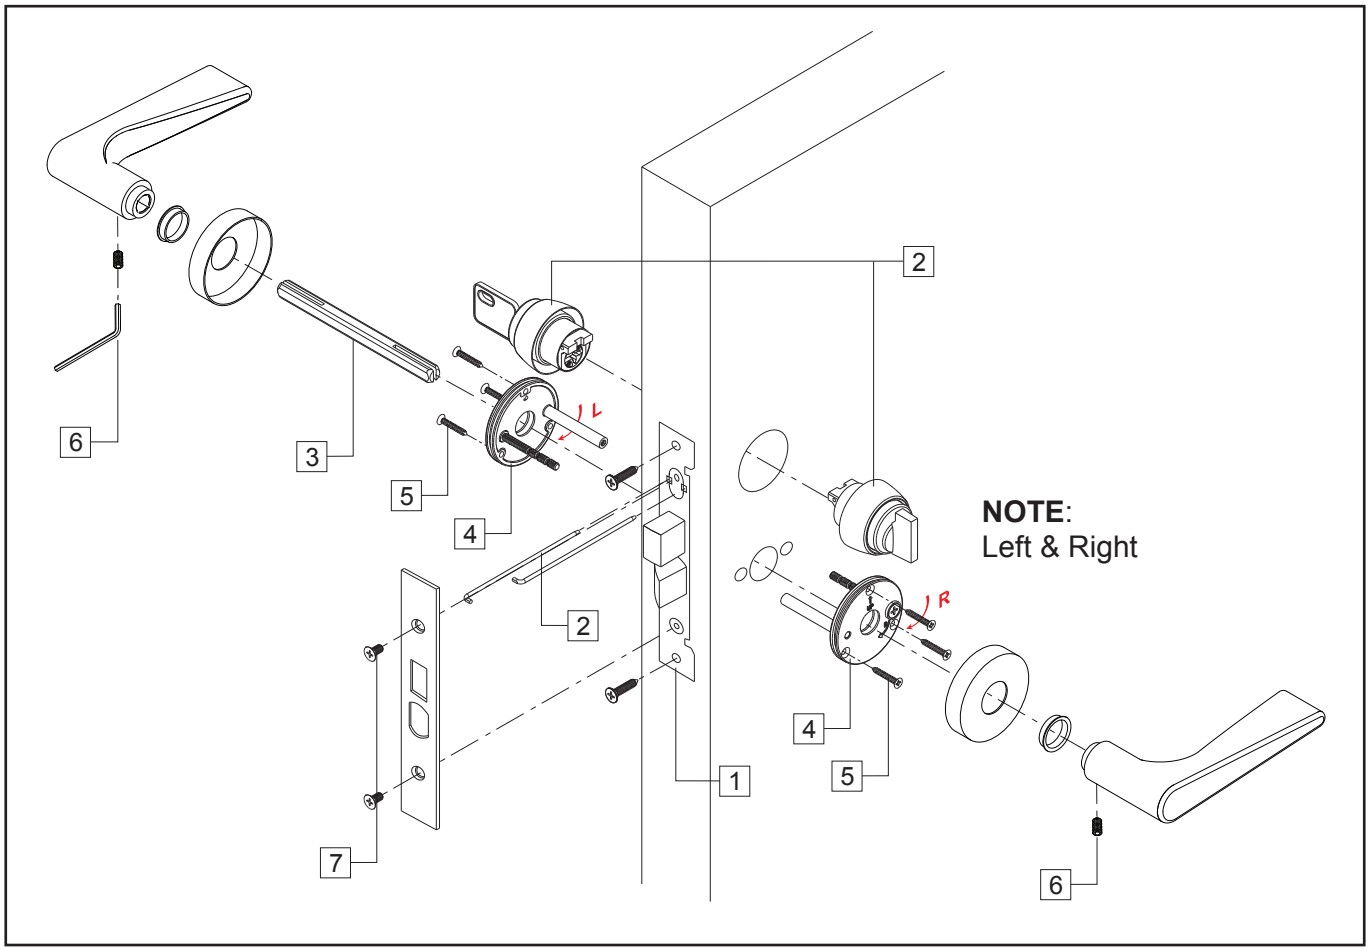

1. Install the lockcase by inserting it into the cutout of the door.
2. Secure the outside cylinder and inside turn-piece to the lockcase by inserting the long retainer pins from the plate side.
3. Insert the square spindle into the hub.
4. Place the fixing brackets onto the door and fix them by tightening up two sets of (male and female screws) as shown in the diagram.
5. Reinforce and secure the fixing brackets by additional screws.
6. Secure the outside and inside lever to the fixing brackets. Tighten the levers to the square spindle with the little thread screw.
7. Finally, install the armored front.

Installation Instruction





For Example 4




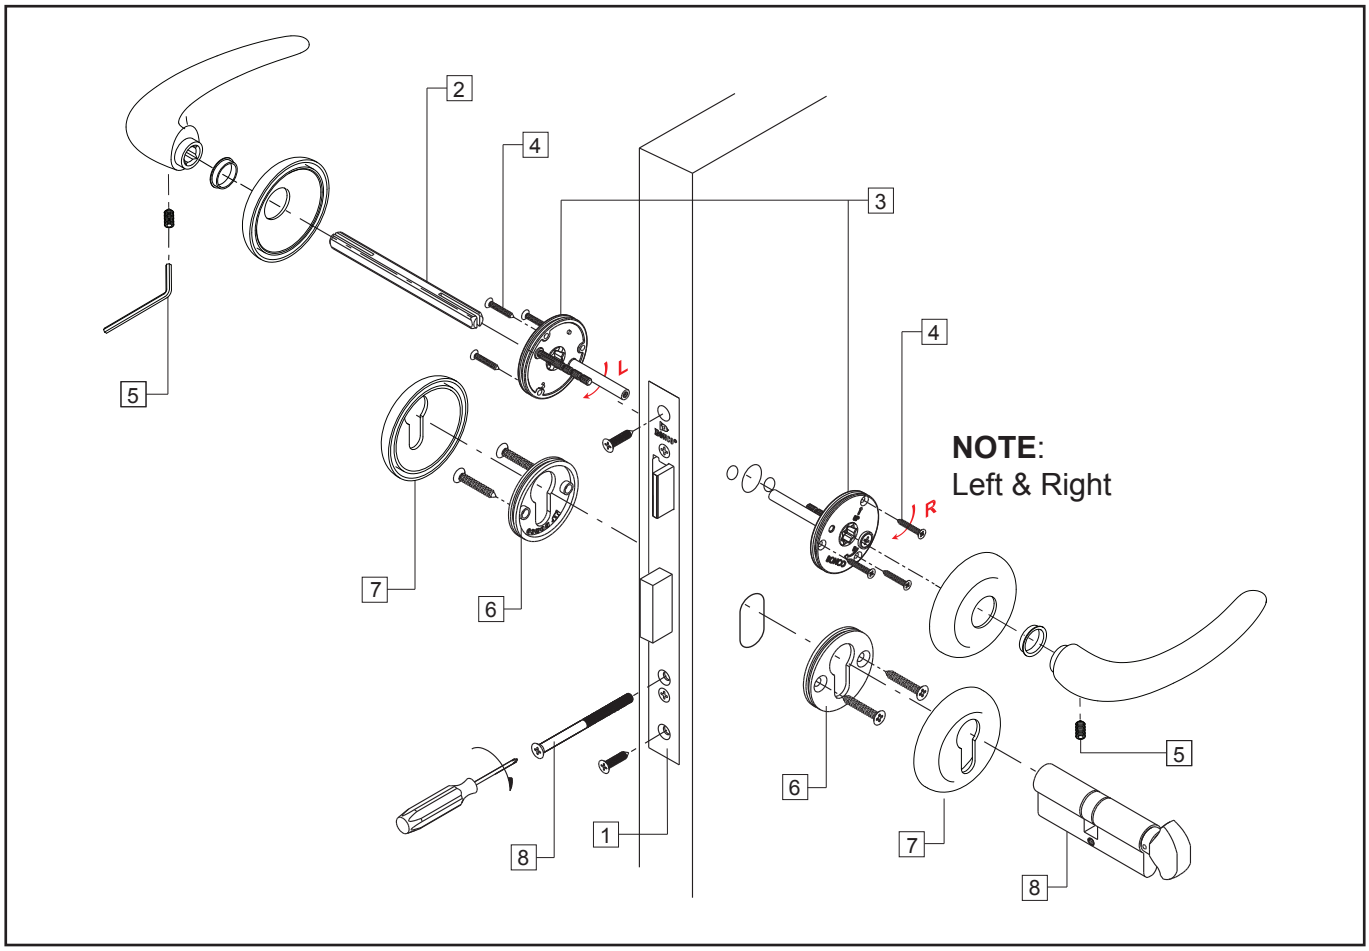


1. Install the lockcase by inserting it into the cutout of the door.
2. Insert the square spindle into the hub.
3. Place the fixing brackets onto the door and fix them by tightening up two sets of screws.
4. Reinforce and secure the fixing brackets by additional screws.
5. Secure the outside and inside lever to the fixing brackets. Tighten the levers to the square spindle with the little thread screw.
6. Place the fixing brackets onto the door and fix them by tightening up four screws.
7. Insert the cylinder through the cylinder escutcheons.
8. Finally, install the armored front.





Information

The series below are recommended to use with **ARGO** lever handles and roses.

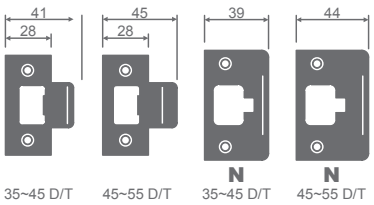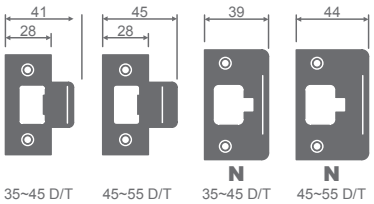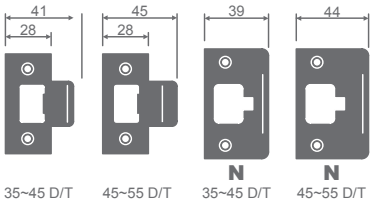
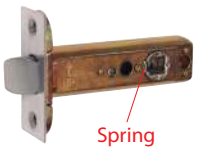
Series	Backset	Door Thickness	Strike Plate	Photo	Spindle
5091SS or 5091SSN **Spring Latch**	60&70 mm	35~55mm		 **Latch:** Stainless Steel, Reversible **Face & Strike Plate:** Stainless Steel	AA
5091E or 5091EN **Spring Latch**	60&70 mm	35~55mm		 **Latch:** Zinc Alloy, Reversible **Face & Strike Plate:** Stainless Steel	AA
5091R or 5091RN **Spring Latch with Spring Hub**	60&70mm	35~55mm		 **Latch:** Stainless Steel, Reversible **Face & Strike Plate:** Stainless Steel	AA
LL Series	50mm	40~50mm			AA

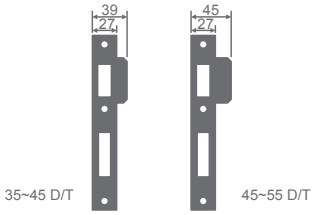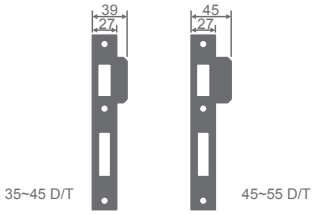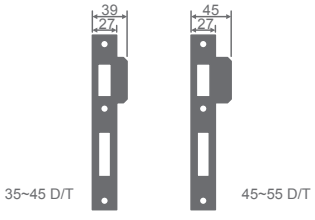Series	Backset	Door Thickness	Strike Plate	Photo	Spindle
CL Series	50mm	45~55 mm			AA
CLQ Series	70 mm	45~55 mm			AA
4626 Series	60&70mm	35~55mm			AA
4650 Series	60&70mm	35~55mm			AA
4653 Series	60&70mm	35~55mm			AL/AR

Fixing Back Plate

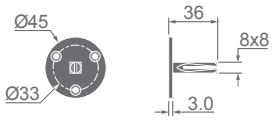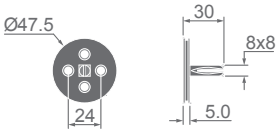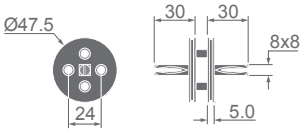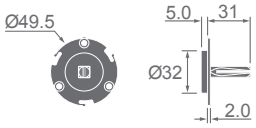Model	Photo	Dimension in mm	Used for
4681-BP			For 4900 Series Dummy Fixing
SBG-BP			For SB, HS & NL Series Levers Handle Dummy Fixing
SBG-BPD			For SBG, HSG & NLG Series Levers Handle Dummy Fixing
5-BP			For 5 Series Covers Dummy Fixing (door thickness must be over 38mm)

Aid Tool - AT Series

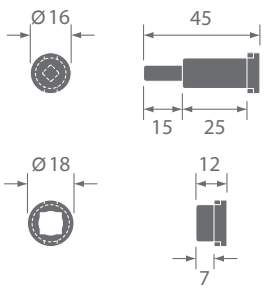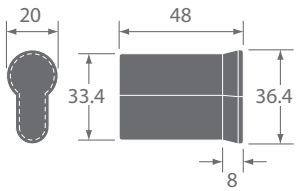Model	Photo	Dimensions in mm	Used for
AT-01			For 49000 Series: 49901, 49903 & 49905
AT-02			For Cylinder Escutcheon: SB, HS & 5 Series Covers

Electroplate Finishes List

ARGO	Description	ARGO	Description
	**F21** Bright chrome		**F22** Satin nickel

APC Finishes List

ARGO	Description	ARGO	Description
	**F91** Matt black powder coating		**F91T** Matt black powder coating with rough surface
	**F93** Matt white powder coating		**F93T** Matt white powder coating with rough surface
	**F94T** Matt light grey powder coating with rough surface		**F96T** Matt dark grey powder coating with rough surface
	**F97** Matt brown powder coating		**F97T** Matt brown powder coating with rough surface
	**F99** Matt champagne silver powder coating		**F99R** Rough touch champagne silver powder coating

ARGO	Description	ARGO	Description
	**F100** Matt silver grey powder coating		**F100T** Matt silver grey powder coating with rough surface
	**F101** Matt champagne gold powder coating		**F102** Matt antique brass gold powder coating
	**F102T** Matt antique brass gold powder coating with rough surface		**F104T** Matt light green powder coating with rough surface
	**F105T** Matt dark green powder coating with rough surface		**F106T** Matt light blue powder coating with rough surface
	**F107T** Matt dark blue powder coating with rough surface		**F108T** Matt rose gold powder coating with rough surface

PVD Finishes List

ARGO	Description	ARGO	Description
	**F16** Polished brass		**F17** Brushed brass
	**F301** Polished bronze		**F302** Brushed bronze
	**F303** Brushed chrome		**F304** Red gold
	**F305** Brushed red gold		**F306** Polished black chrome
	**F307** Brushed black chrome		**F308** Steel optic
	**F310** Polished nickel		**F311** Gold optic
	**F316** Brushed nickel		



www.argo-hardware.com

AG-011-2601